



## BARBEQUE INSTRUCTIONS



PLEASE READ FULLY BEFORE OPERATING.

- 1 THIS BBQ IS EQUIPED WITH A HAND TIGHTENED PROPANE HOSE. TURN CLOCKWISE TO ATTACH TO PROPANE TANK. NO ADDITIONAL TOOLS NEEDED.
- 2 ENSURE ALL CONTROL KNOBS ARE TURNED TO THE LEFT AND CLOSED POSITON AND TURN THE PROPANE TANK VALVE TO THE FULL OPEN POSITION.
- 3 LIGHT AND HOLD THE PROVIDED LIGHTER NEXT TO THE FIRST BURNER AND SLOWLY TURN THE CORRESPONDING CONTROL KNOB TO THE RIGHT UNTIL THE BURNER LIGHTS. DO NOT TURN THE KNOB TO HIGH IMMEDIATELY OR THE INFLUX OF GAS MAY BLOW THE FLAME OUT.
- 4 REPEAT FOR EACH BURNER UNTIL ALL ARE LIT. LET RUN ON LOW FOR 5 MINUTES AFTER WHICH POINT YOU CAN ADJUST THE BBQ TO THE DESIRED TEMPERATURE.
- 5 WHEN FINISHED, TURN ALL CONTROL KNOBS TO THE LEFT AND CLOSE THE PROPANE TANK VALVE.



**IMPORTANT:**  
NEVER LEAVE THE BBQ RUNNING UNATTENDED.



### CLEANING

TO RECEIVE A REFUND OF YOUR CLEANING DEPOSIT, PLEASE SCRAPE DOWN THE GRATES WELL WITH THE PROVIDED WIRE BRUSH.

**HAPPY GRILLING!**